

| You are in: Lozier Products > Products > Wall End Display Stabilizer

# Wall End Display Stabilizer

Part Number:



Anchor a freestanding Wall End Display to an Island section with a Wall End Display Stabilizer.

## Product Details:

- Anchors freestanding 2', 30", 3', or 4'W Wall End Display to 3' or 4' Island Sections
- Accommodates up to 9" offset (3" increments)
- Required when a Wall End Display or Contoured End Display has an unacceptable freestanding height-to-depth ratio (Levelers exceed 6:1)
- Wall End and Gondola End Section Top Rail not required
- Stabilizes top of WEDNB (No Base End Cap)

## COMPONENTS (ORDERED SEPARATELY):

- Wall End Display End Top Rail (WEDER)
- Wall End Display Gondola Top Rail (WEDGR)

## How to Order

---

## Wall End Display End Top Rail

---

- Wall End Display End Top Rail is part of Wall End Display Stabilizer, and is ordered separately
- Includes hardware pack with Uprite Inserts



### Product Options and Numbers

Example Part #: **WEDER 48 PLT**

Wall End Display End Top Rail: **WEDER**

Width: 24", 30", 36", **48"**

Standard Finish: **PLT**, Optional Catalog Colors

Suffix Key	
PLT	- Platinum

### Wall End Display Gondola Top Rail

---

- Wall End Display Gondola Top Rail is part of Wall End Display Stabilizer, and is ordered separately
- Includes hardware pack with Uprite Inserts



### Product Options and Numbers

Example Part #: **WEDGR 48 PLT**

Wall End Display Gondola Top Rail: **WEDGR**

Width: 36", **48"**

Standard Finish: **PLT**, Optional Catalog Colors

Suffix Key	
PLT	- Platinum